

burda style magazine - 2/2010 Shoulder Bag

By: burda style magazine

<http://www.burdastyle.com/projects/burda-style-magazine-22010-s>



Print Shoulder Bag burda style magazine patterns FAQ

Materials

Print poplin, plain canvas, and suede leather


Step 1 — Preparation

WEBKANTE

150 CM



a

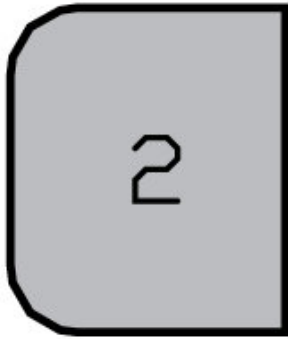

2



1

Trace the pattern pieces from the pattern sheet.

Seam allowances:

Include 1 cm (3/8 in) seam allowance at straight upper edge of front bag piece and at narrow edges of side piece, all other edges are without seam allowances.

Step 2 — Cutting Out



Print fabric:

1 back piece with integrated flap 1x

2 front piece 1x

a) side piece, 64.5 cm (25 1/2 ins) long, 5 cm (2 ins) wide.

Plain fabric:

1 back piece with integrated flap 1x

2 front piece 1x

a) side piece, 64.5 cm (25 1/2 ins) long, 5 cm (2 ins) wide,

b) binding strip for front edges of bag, 67 cm (26 1/2 ins) long, 3 cm (1 1/4 in) wide,

c) 1 binding strip for back edges of bag and edges of flaps, 116 cm (45 3/4 ins) long, 3 cm (1 1/4 in) wide.

2 strap pieces, 76 cm (30 ins) long, 3.5 cm (1 1/2 ins) wide

Interfacing (G 740): See pattern layout. Interface strap pieces with Vilene/Pellon G 785. Cut interfacing 2 mm (a scant 1/8 in) smaller than straps.

Step 3 — Front pieces, fastening tabs and buckles

Lay front pieces right sides together. Stitch along upper edge. Turn front piece right side out. Topstitch close to upper edge. Baste side and lower edges together. Lay fastening tabs with buckles on front piece as marked and stitch ends in place 4 cm (15/8 ins) long.

Step 4 — Side pieces

Lay side pieces right sides together. Stitch narrow (upper) edges together. Turn side piece right side out. Topstitch edges. Baste lengthwise edges together. Baste back pieces wrong sides together.

Step 5 — Sewing front and back pieces together

Pin side piece to front of bag along side and lower edges and to back of bag below marking. Stitch edges together 5 mm (3/16 in) wide. Use a soft-leaded pencil to mark lengthwise centre of binding strips on wrong side of leather. Apply glue (glue stick) to one half of the strips. Glue side and lower edges of bag as well as edges of flap to half the width of the binding strips. Turn ends of strips in at upper edges. Overlap ends of binding 1 cm (3/8 in) wide at back edges of bag, cut off remainder. Lay binding around edges and stitch close to edges.

Step 6 — Fastening Tabs

— Lay fastening tabs without buckle on flap as marked and stitch ends in place 4 cm (15/8 ins) long.

Step 7 — Straps

Lay strap pieces wrong sides facing and stitch together close to edges. Lay ends of straps 2 cm (3/4 in) wide on upper edges of side piece, stitch ends in place with a square of stitching and crisscross.

Step 8 — Bind edges of bag

Fold binding strips in half lengthwise and press, right fabric side facing out. Unfold fabric binding again. Now turn each lengthwise edge in to the pressed crease one after the other and press again. Unfold one lengthwise edge of binding and stitch onto edges of bag 7 mm (1/4 in) wide along the pressed crease (stitching from the side piece). Turn in ends of binding at upper edges of bag. Turn in end of binding lying underneath at back edges of bag. Lay binding around edges and stitch close to edges.

BurdaStyle

burda style magazine - 2/2010 Shoulder Bag