

burda style magazine 2/2010 Shoulder Bag

By: burda style magazine

<http://www.burdastyle.com/projects/burda-style-magazine-22010-s>




Shoulder Bag. For more information on this and other burda style magazine patterns, please see this dedicated blog post.

Materials

Twill

Step 1 — Preparation

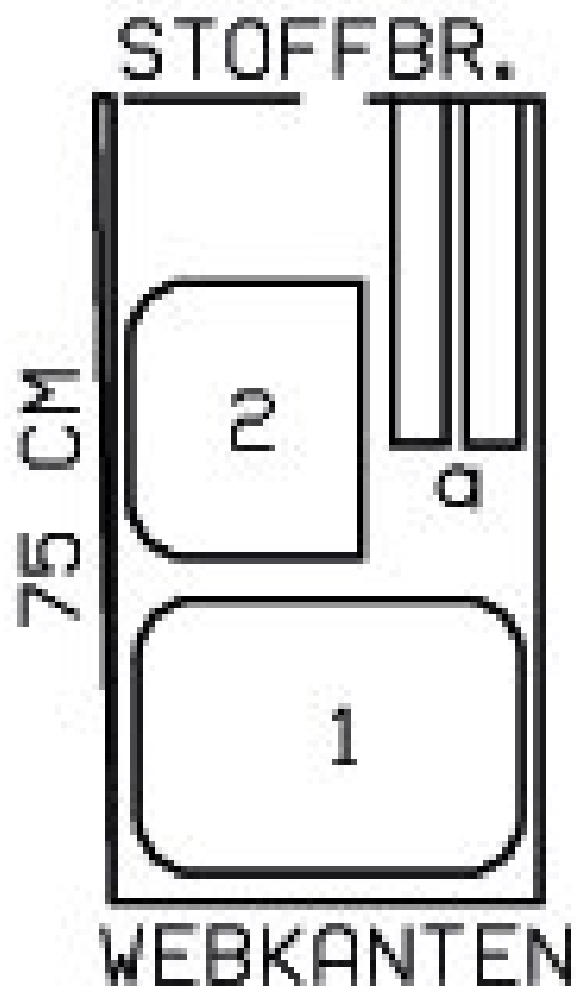

147 A

Trace the pattern pieces from the pattern sheet.

Seam allowances:

Include 1 cm (3/8 in) seam allowance at straight upper edge of front bag piece and at narrow edges of side piece, all other edges are without seam allowances.

Step 2 — Cutting Out



Twill:

1 back piece with integrated flap 2x

2 front piece 2x

a) 2 side pieces, 64.5 cm (25 1/2 ins) long, 5 cm (2 ins) wide.

Suede leather:

2 strap pieces, 76 cm (30 ins) long, 3.5 cm (1 1/2 ins) wide,

1 binding strip for front edges of bag, 67 cm (26 1/2 ins) long, 2 cm (3/4 in) wide,

1 binding strip for back edges of bag and edges of flaps, 116 cm (45 3/4 ins) long, 2 cm (3/4 in) wide.

Interfacing: Iron on strap pieces. Cut interfacing 2 mm (a scant 1/8 in) smaller than straps.

Step 3 — Front pieces, Side and Lower Edges, and Fastening Tabs

Lay front pieces right sides together. Stitch along upper edge. Turn front piece right side out. Topstitch close to upper edge. Baste side and lower edges together. Lay fastening tabs with -buckles on front piece as marked and stitch ends in place 4 cm (15/8 ins) long.

Step 4 — Side Pieces, Lengthwise Edges, Back Pieces

Lay side pieces right sides together. Stitch narrow (upper) edges together. Turn side piece right side out. Topstitch edges. Baste lengthwise edges together. Baste back pieces wrong sides together.

Step 5 — Binding Strips

Pin side piece to front of bag along side and lower edges and to back of bag below marking. Stitch edges together 5 mm (3/16 in) wide. Use a soft-leaded pencil to mark lengthwise centre of binding strips on wrong side of leather. Apply glue (glue stick) to one half of the strips. Glue side and lower edges of bag as well as edges of flap to half the width of the binding strips. Turn ends of strips in at upper edges. Overlap ends of binding 1 cm (3/8 in) wide at back edges of bag, cut off remainder. Lay binding around edges and stitch close to edges.

Step 6 — Fastening Tabs

Lay fastening tabs without buckle on flap as marked and stitch ends in place 4 cm (15/8 ins) long.

Step 7 — Straps

Lay strap pieces wrong sides facing and stitch together close to edges. Lay ends of straps 2 cm (3/4 in) wide on upper edges of side piece, stitch ends in place with a square of stitching and crisscross.

BurdaStyle

burda style magazine 2/2010 Shoulder Bag