

3/4 Pants 03/2012

By: burda style magazine

<http://www.burdastyle.com/projects/34-pants-032012>



Dress pant sewing pattern. burda style magazine patterns FAQ

Materials

Canvas, fabric width: 150 cm (59 ins), length: 1.25 1.25 1.40 1.45 1.45 m (1 1/2 1 1/2 1 5/8 1 3/4 1 3/4 yds).
A small piece of lining, approx. 30 × 40 cm (12 × 16 ins), for the pocket pieces. Vilene/Pellon G 785. 1 zipper, 14 14 14 16 16 cm (6 6 6 7 7 ins) long. 1 no-sew trouser hook fastener.

Step 1 — Preparations



Paper cut for ANSI A (German DIN A4) prints:

This pattern is printed on 8.5 × 11 sheets of plain paper. Do not scale or center pages before printing. Wait until all sheets are printed out before beginning to tape them together. **Do not cut out pattern pieces yet**— Arrange the sheets on a large, hard, flat surface so that they fit together, matching up like numbers and letters (i.e. 6A to 6A). To tape pattern together, fold under the margin of one piece (6A) and tape right against the line of it's matching number/letter (6A).

Trace the pattern pieces from the pattern sheet. Follow lines and details for style 112 A (This pattern also includes pieces, lines and markings for style 112B)


Trace pocket piece from piece 2, to abutting line.

The stitching line at zipper slit is marked for size 36. For sizes 38 to 44, mark the stitching line the same distance from centre front as for size 98, noting length of slit.

burda style magazine pattern do not have seam allowance included.



Seam and hem allowances to be added: Seams and edges 1.5 cm (5/8 in), hem 4 cm (1 5/8 ins), upper pocket edge 3 cm (1 1/4 ins).

Step 2 — Cutting out

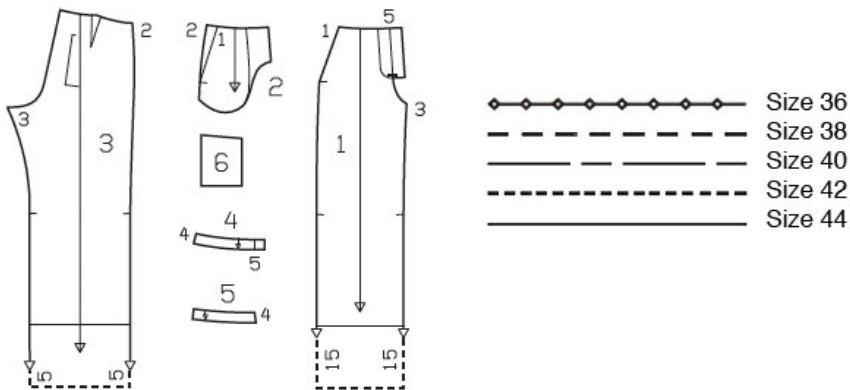

Main fabric, 150 cm width, size 36-40

size 42-44

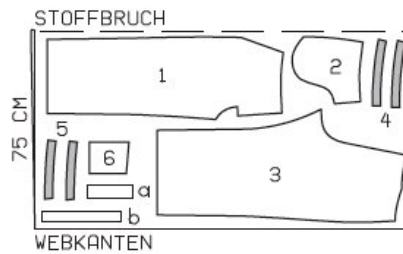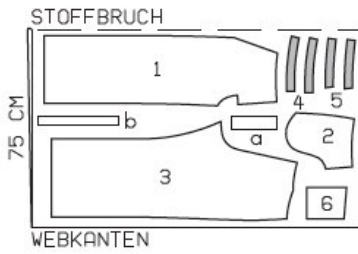

Webkante = Selvage
Stoffbruch = Fabric fold

Main fabric:

- 1 front trouser piece 2x
- 2 side hip yoke with integrated pocket 2x
- 3 back trouser piece 2x
- 4 front waistband 4x
- 5 back waistband 4x
- 6 back pocket 2x

Also draft and cut the following pieces, not included on the pattern sheet

a) left underlap piece, cut a rectangle in the following dimension:

Size 36 – 40: 15 × 5 cm (6 x 2 ins)


Size 42 – 44 17 × 5 cm (6 3/4 x 2 ins) , finished width 2.5 cm (1 in)

b) 5 belt loops, a total of 30 cm (12 ins) long, 3.5 cm (1 1/2 ins) wide (incl. allowances).

Lining:

pocket piece (piece 2) twice

Step 3 — Sewing

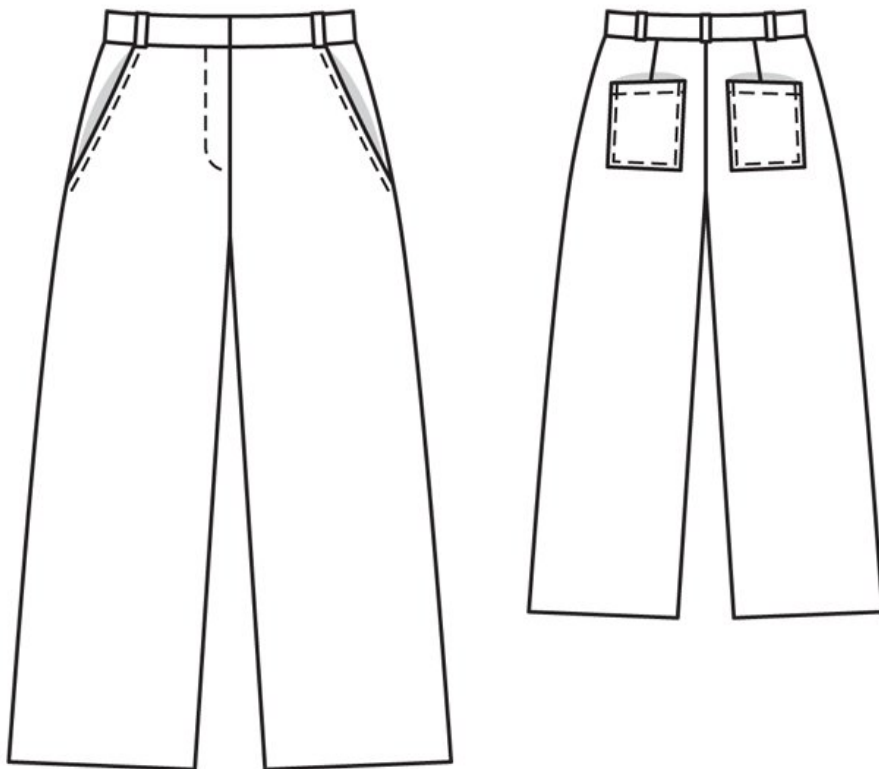

Stitch back darts and press to centre.

Back pockets: Press allowances on upper pocket edges to inside, turn in, and stitch 1.5 cm (5/8 in) from fold edge. Press allowances on side and lower edges to inside. Pin pockets to back trouser pieces, at abutting lines. Stitch 5 mm (3/16 in) from edges.

Hip yoke pockets: Stitch pocket pieces to pocket opening edges of trouser fronts, right sides facing. Turn pocket pieces to inside. Topstitch 5 mm (3/16 in) from pocket opening edges. Pin pocket opening edges to side hip yokes at abutting lines. Stitch pocket edges together. Baste pocket pieces on wrong side of trouser fronts, first trimming away allowance of right pocket piece along centre front.

Stitch side seams and inside leg seams. Stitch centre front seam from slit mark to inside leg seam.

Zipper slit, Press self-facings on zip slit edges to inside along centre front on the right edge and 5 mm (3/16 in) before centre front on left edge. Stitch zip under left slit edge (underlap), stitching close to teeth of zip. Pin slit closed, matching centre fronts. Stitch loose zip tape to right facing, not catching trouser piece. Baste facing in place. Topstitch slit, from upper edge to 2 cm (3/4 in) before end, as marked. Fold underlap piece lengthwise and stitch across bottom end. Turn right side out. Lay underlap under left slit edge and pin edge to

underlap. Stitch facing to underlap, close to zip joining seam. Lay the slit closed again and topstitch to the end, catching underlap.

Fold strip for belt carriers length wise, right side facing in. Stitch 1.5 cm (5/8 in) from fold edge. Turn right side out. Topstitch close to edges. Cut into 5 pieces. Baste belt carriers to upper edge of trousers, placing one each above pocket openings in front and 3 cm (1 1/4 ins) from darts in back.

Waistband and centre back seam: Stitch outer waistband pieces to upper trouser edges, leaving right end of waistband extending from centre front. Stitch left end to slit underlap. Press allowances of joining seams onto waistband. Lay inside waistband right sides together with attached waistband. Stitch upper edges together. Trim seam allowances. Turn inside waistband pieces up. Press seams open. Trim extending end of right waistband to width of seam allowance. Stitch centre back seam. Press seam open, from upper edge to beginning of crotch curve. Do not press allowances flat along curve. Attach trousers hook to inside waistband, 1 cm (3/8 in) from right front end. Turn inside waistband to outside and stitch across front ends. Trim seam allowances. Turn waistband right side out. Turn inside waistband edge under, approx. 4 cm (1 5/8 ins) long, and baste, then lay remaining edge flat over joining seam. Topstitch waistband close to edges. Attach bar of fastener to waist band, to match hook.

Turn belt loops up, turn ends under, and stitch to upper waistband edge. Sew remaining belt carrier in place, over centre back seam.

Press hems to inside and sew in place by hand.

BurdaStyle

3/4 Pants 03/2012