

Anita

By: burdastyle

<http://www.burdastyle.com/projects/anita>



Stylish and flattering, the Anita straight leg jeans have finally sauntered their way into our pattern catalog. These jeans sit perfectly below your waist and above your hips, and are tapered from the thighs down. They even have two back pocket options, in addition to the classic jeans 5th pocket! Make a pair or two, or even

three, because everyone knows you can never have enough pairs of jeans!

Materials

Gray stretch denim, jeans buttons and studs, zipper

Step 1

**burda Download-Pattern
Pants 6006 - Instructions**

●●□□
easy

close fitting

burda sizes	55 ins / 140 cm						
	32	34	36	38	40	42	44
yds	1 1/4	1 1/4	1 1/4	1 1/4	1 1/4	1 1/4	1 1/4

→ with nap

Interfacing
24" x 16"
(60 cm x 40 cm)

Nur querelastische Stoffe mit Stretchanteil

32, 34: 8 cm
36-44: 10 cm

42 1/2
(108 cm)

13"-15 1/2"
(33-39 cm)

right side
wrong side
interfacing
lining
batting

Patternpieces:

- 1 Front pant piece 2x
- 2 Haunch yoke 2x
- 3 Pocket pouch 2x
- 4 Back pant piece 2x
- 5 Back yoke 2x
- 6 Front waistband 4x
- 7 Back waistband 4x
- 8 Right front pocket 1x
- 9 Left back pocket 1x
- 10 Left back pocket 1x
- 11 Right back pocket 1x
- 12 Right back pocket 1x
- 13 Belt loop 1x

Fabric: Diagonally stretchable fabrics

Step 2



The patterns can be printed out at the copy shop. If you decide to print them at home, follow the instructions: Paper cut for ANSI A (German DIN A4) prints: The patterns are printed out on 25 sheets with a thin frame. Wait, until all sheets are printed out. Arrange the sheets so that they fit together (see extra page with the overview of the prints). Cut off the single sheets on the upper and right edge along the thin frame lines. Begin with the left lower sheet and then glue the parts in the frame lines together precisely.

Step 3



ADJUST PATTERN SIZES

Select your size according to the Burda-dimension table: Dresses, blouses, jackets and coats according to the bust size, trousers and skirts according to the hip width. Change the patterns about those inches (cm) if necessary, to fit your measurements if they deviate from the Burda-dimension table. Cut out the pattern according to your size.

Refer to our “Adjust patterns for mixed sizes” technique

Upper waist band edge 1.5” (3.5 cm) below the waist.

For sizes 2 to 12 (EU 34 to EU 44) draw the stitch line for the zipper the same length as to the front center, like size 0 (EU 32).

LENGTHENING OR SHORTENING THE PATTERN PIECES

Our pattern is calculated for a height of 5’6” (168 cm). If you are taller or shorter, you may adjust the pattern to fit your size. Choose your size at the lines marked “lengthen or shorten here”. Thus the proper fit is preserved. Make sure that you adjust all pieces of one pattern by the same amount at the same lines.

How to lengthen and shorten pattern pieces:

Cut the pattern pieces along the marked lines.

To lengthen, slide the two halves of the pattern piece as far apart as necessary.

To shorten, overlap the two halves of the pattern piece as far as necessary. Even out the side edges.

Step 4



CUTTING OUT

FOLD () means: here is the center of a pattern piece but never a cut edge or a seam. The piece should be cut double, with the fold line forming the centre line. Pattern pieces that are outlined with a broken line in the cutting diagrams are to be placed face down on the fabric. The cutting diagrams on the pattern sheet show how the pattern pieces should be placed on the fabric.

The cutting diagrams show the placement of the pattern on the fabric

For a single layer of fabric, the pattern pieces are pinned to the right side. For double layers of fabric, the right sides are facing and the pattern pieces are pinned to the left side. The pattern pieces that are shown in the cutting diagram, extending over the fold of the fabric, should be cut last from a single layer of fabric.

Step 5

INTERFACING



SEAM AND HEMLINE ALLOWANCES are included on an average: 5/8" (1.5 cm) for all edges and stitches. Use BURDA carbon paper to transfer all pattern lines and marks onto the wrong side of the fabric pieces. You will find instructions in the packet.

Interfacing

Cut interfacing according to the drawing and press onto the wrong fabric side


SEWING

When sewing, the right fabric sides should be facing. Transfer all lines on the pattern using a basting stitch onto the right side of the fabric.

Tips for the usage of stretchable fabrics

For stitching please use a special stretch fabric needle for your sewing machine. In order to keep the seams stretchable use a narrow zigzag stitch (stitch width 0.5-1mm, length approximately 2.5 mm) , or a special elastic stitch (see instructions of your sewing machine). Please make sure that the thread tension is not adjusted too tightly.

Step 6

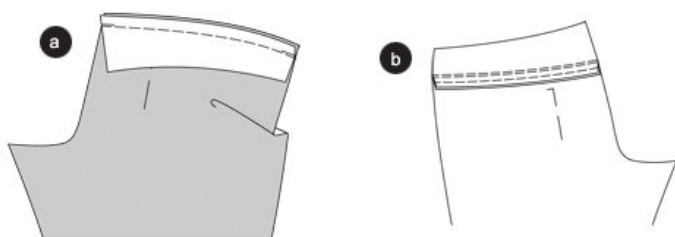

PANT


Back yoke

Baste the back yoke onto the back pant piece, the right sides facing (seam 2), and stitch. (a)

Trim allowances, neaten altogether, fold inwards and press the pant pieces. Stitch the pant pieces along the seam

approximately 1/2" (0.7cm) wide, and enclose allowances. (b)

Step 7

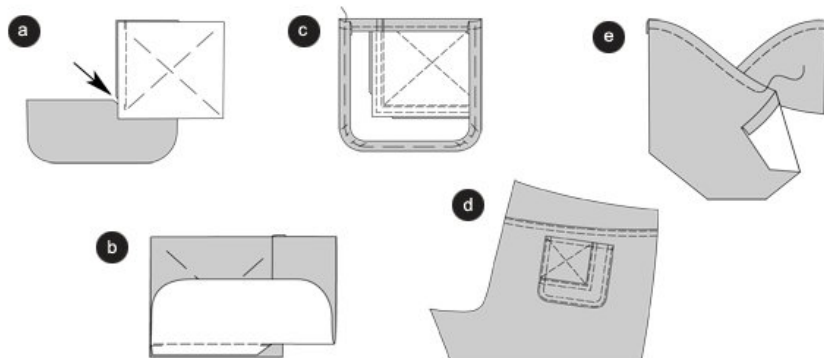

Pockets / back pant pieces

Right pocket (pos. 11 and 12)

Stitch piece no. 12 onto piece no. 11 (the right sides facing) until you reach the corner. Cut in the corner of piece 11 (see arrow). Stitch piece 12 until you reach the lateral edge (3a). Trim allowances, fold and press piece no. 11 inwards. Stitch seam narrowly, approximately 0.7cm. Stitch piece no. 12 crossover as demonstrated on the picture. Cut the allowances of the lateral and lower edge back to 1cm, neaten. (a)

Neaten the allowances of the upper pocket edge, fold and press inwards. Stitch upper edge 1cm wide. Fold and baste the allowances of the lateral and lower edges, press. (b)


Baste the pocket, meeting the marked line, onto the right back pant piece. Stitch narrowly, 0.7cm wide. ©

Left pocket

Take pieces 9 and 10 and cut the allowances of the upper edge back to 1cm of width. Neaten, fold and baste. Press edges. Piece 10 needs to be stitched 0.7cm wide.

Baste piece 9 onto piece 10 along the marked line (seam 8). Stitch the edge 0.7cm wide, enclose piece 10. Neaten the allowances of the lateral and lower edges, fold and baste, press. Baste the pocket that meets the marked lines, onto the left back pant piece, stitch narrowly and 0.7cm wide. (d)

Step 8

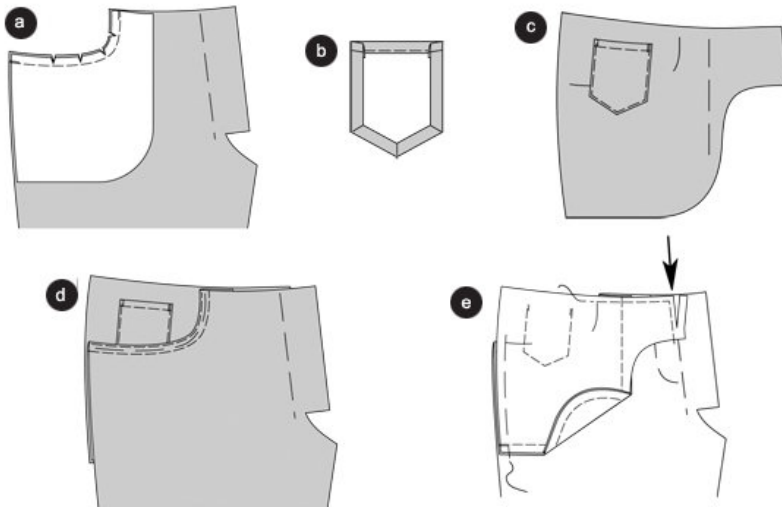

Hip yoke pockets


Position the pocket pouches onto the front pant piece, the right sides facing. Baste the pocket opening edges on top of each other (seam 1), cut back the allowances and notch. Fold pocket pouch to the inside, baste. Press edge, stitch narrowly .â€ (0.7cm) wide. (a)

Little pocket (piece no. 8): Press the allowances of the upper edge inside and stitch, then press the other allowances inside (b). Baste the pocket, the marked lines meeting, onto the right haunch yoke and stitch narrowly ©.

Pin the front pant piece onto the hip yoke, the pocket opening meets the marked line. The pocket pouch and the hip yoke are positioned on top of each other, the right sides facing. Baste pocket opening (d).

Baste the pocket pouch onto the hip yoke, being careful NOT to sew onto the front pant piece. Stitch. Neaten allowances altogether. Baste the side, upper and front edges of the hip yoke piece onto the front pant piece. Important: Cut the allowances of the front edge of the left haunch yoke at the front center (see arrow). (e)

Step 9

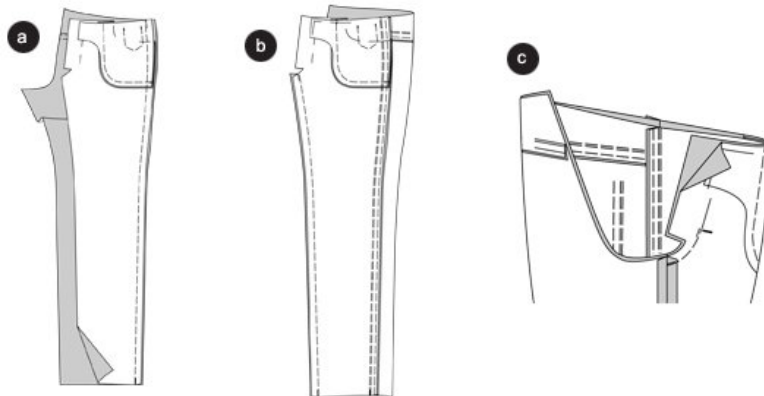

Side seams

Position the front pant pieces onto the back pant pieces, the right sides facing. Baste the side seams (seam 3) and stitch. Neaten allowances altogether and press inside the back pant pieces. Stitch the seam narrowly 1/4" (0.7cm) wide, thereby enclosing the allowances. (a)


Inner pant leg seams

Fold the pant legs lengthwise, right side inside. Baste the inner pant leg seams (seam 4) and stitch. Neaten allowances and press apart. (b)

Front center seam

Fold one pant leg inside out. Move the pant leg inside the other, the right sides are facing. Stitch the center seam from the slit sign to the inner leg seams. Secure seam ends. Cut back the allowances of the rounding. Neaten allowances, also the ones at the front facing. ©

Step 10

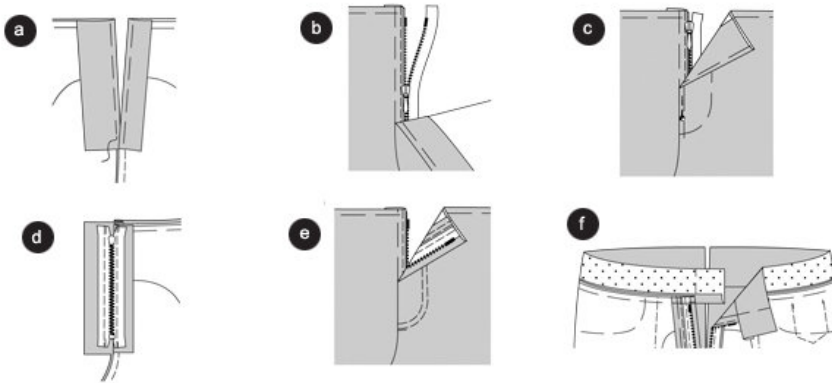

Zipper

Fold inside and baste the facing of the front pant piece along the front center. Allow the facing to under lap approximately 1" (1cm) at the right front pant piece, so that the zipper will be covered this way later on. Fold inwards and baste the facing, press. (a)

Baste the under lap onto the zipper strap close to the little teeth, and stitch narrowly. (b)

Close the zipper. Pin the slit, centers are facing. Baste the zipper strap onto the right facing ©; do NOT incorporate the pant piece. Stitch (d).


Stitch the left slit edge as demonstrated, thereby incorporating the facing. (e)

Waistband

Position the front waistband pieces onto the back waistband pieces, the right sides facing. Stitch lateral seams (seam 4). Press the allowances apart.

Baste the waistband pieces, including the interlining onto the upper waistband edges (seam 5), the right sides facing. The lateral seams meet. Stitch. Cut back the allowances and press inside the waistband. (f)

Step 11

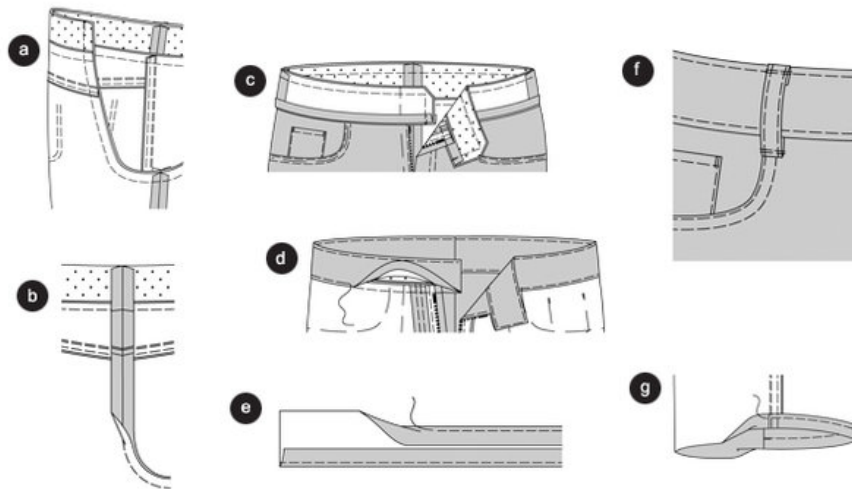

Back center seam

Move pant legs one inside the other, the right sides facing.

Baste the back center seam, also of the waist band. Stitch center seam. Trim allowances and press them apart from the top to the beginning of the rounding (19a). Stitch the back center seam of the still unfinished waistband. Press allowances apart. Press the allowance of the long lower waistband inside. (a)

Pin waist band onto the already stitched waistband, the right sides facing. Seams meet. Stitch the narrow front edges on top of each other. Cut back the allowances cut the corners bias wise. Fold the waistband inside out. Baste edges, press. Baste the middle half of the back waistband onto the upper edge of the pant. (b) Stitch waistband edges narrowly, at the same time stitch the middle half of the waistband ©. Apply a BUTTON HOLE onto the left front waist band. Apply a button onto the underlap.

Loops

Neaten straps and press the long edges inwards, 0.7cm wide. Stitch edges narrowly. Cut the strap into five equal pieces. Fold the ends inwards to make loops. (d)

Stitch the loops onto the back center seam, 1cm behind the side seams on the back, and in the front at the pocket openings, in each case onto the upper and lower seam of the waistband. (e)

Hem

Neaten hem, fold inside and baste, press. Stitch the lower pant edge 1.2cm wide, stitch the hem. (f)

BurdaStyle

Anita